 


1700-AT787

LEDWISE®



RECON 330

LEDWISE RECON 330 MANUAL

Insert two 26650 batteries inside the lamp, positive head towards to light head. Charge the batteries before using the flashlight for the first time.

ON-OFF

Press the side switch once – ON, press once again – OFF.

Switch modes

When the light is ON, tap the side switch lightly to change modes: HIGH-MEDIUM-LOW-STROBE. Modes will change in cycle. You can also turn HIGH mode on by pushing lightly to main switch when the light is off.

Power indication

When the power is off, the power indication starts after tapping the side switch continuously 3 times. The indicator light will blink in green and red; one green blink indicates 1V, one red blink indicates 0.1V. For example, 3.8V: 3 green blinks and 8 red blinks.

Power recharging

Mount the charger tightly on its place and put the flashlight into the charger. Make sure the flashlight is in straight position and metal nails in the flashlight are always in contact with the charging

pole in the charger. Recharging is working normally when the indicator light in the charger is red and the indicator light on the flashlight blinks green. When recharging is finished, the indicator light on the charger will change to green, and the indicator light on the flashlight will not blink. Please notice that the charger is 12V only. Place the charger only to a flat surface and to a place where it's not in contact with water or other chemicals. Tail bracket 1700-AT798 is sold separately.

Warning: Don't look straight to light. It can damage your eyes. Light head can be hot, don't touch it.

Strobe mode can lead to epileptic causes. Please consider using STROBE mode in advance. Always use high quality batteries and correct battery types with your flashlight. Don't use any other battery models/types inside the lamp than 26650.

Storage

Remove the batteries if you don't use the flashlight for a while. Store and keep the flashlight off fire, steam and humid surroundings. Clean the body with soft fabric clothing and lubricate in silicon grease every six months. Regular cleaning of battery contacts improves the flashlight's

performance, as dirty contacts can cause the lamp flickering, shining intermittently or even fail to illuminate for the following reasons:

A: Battery needs replacing (choose the battery mentioned in this manual)

B: PCB, spring or other contacts are dirty (clean the contacts)

Tekniset tiedot \ Tila		Tila			
		High	Medium	Low	Strobe
ANSI lumens (lm)		930	470	233	930
Runtime (h)		3	7	16	6
Beam intensity (cd)		47440			
Beam distance (m)		436			
Impact resistance (m)		1			
Waterproof		IPX7			



www.thelights.fi

Importer:
Startax Finland Oy
www.startax.net



Made in China

